


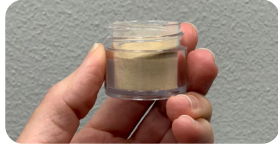










TROUBLESHOOTING YOUR PDS

TRY THESE STEPS BEFORE YOU CONTACT CUSTOMER SERVICE.

PROBLEM	SOLUTION		
<p>PDS pump does not activate on trigger pull</p>	<p>1 Check to be sure your PDS switch is moved to the "on" position</p> 	<p>2 Check to be sure the battery is fresh and installed properly</p> 	<p>3 Check to be sure the battery cover is installed properly</p> 
<p>No bait is being applied</p>	<p>1 Make sure there is bait in the cartridge and it is not empty</p> 		
<p>Bait is not discharging from the applicator tip</p>	<p>1 Remove the cartridge from the PDS</p> 	<p>2 Turn the PDS on and pull the trigger</p> 	<p>3 Feel if there is air movement where the cartridge attaches</p> 
	<p>4 Remove the battery cover and inspect flexible plastic tubing for evidence of a clog</p> 	<p>5 Insert a pipe cleaner into the applicator receptacle</p> 	<p>6 You should be able to visibly see the pipe cleaner in the cartridge chamber</p> 
<p>Contact Us</p>	<p>If the above steps do not resolve your issue, contact us at csi-pds.com/contact-csi.</p>		

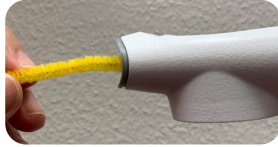